



NITTO DENKO



HYDRANAUTICS

Membrane Element

ESPA1-8040

Performance:	Permeate Flow:	12,000 gpd (45.4 m ³ /d)
	Salt Rejection:	99.3 % (99.0 % minimum)

Type	Configuration:	Spiral Wound
	Membrane Polymer:	Composite Polyamide
	Membrane Active Area:	400 ft ² (37.1m ²)


Application Data*	Maximum Applied Pressure:	600 psig (4.16 MPa)
	Maximum Chlorine Concentration:	< 0.1 PPM
	Maximum Operating Temperature:	113 °F (45 °C)
	pH Range, Continuous (Cleaning):	2-10 (1-12)*
	Maximum Feedwater Turbidity:	1.0 NTU
	Maximum Feedwater SDI (15 mins):	5.0
	Maximum Feed Flow:	75 GPM (17.0 m ³ /h)
	Minimum Ratio of Concentrate to Permeate Flow for any Element:	5:1
	Maximum Pressure Drop for Each Element:	10 psi

* The limitations shown here are for general use. For specific projects, operating at more conservative values may ensure the best performance and longest life of the membrane. See Hydranautics Technical Bulletins for more detail on operation limits, cleaning pH, and cleaning temperatures.

Test Conditions

The stated performance is initial (data taken after 30 minutes of operation), based on the following conditions:

1500 PPM NaCl solution
150 psi (1.05 MPa) Applied Pressure
77 °F (25 °C) Operating Temperature
15% Permeate Recovery
6.5 - 7.0 pH Range

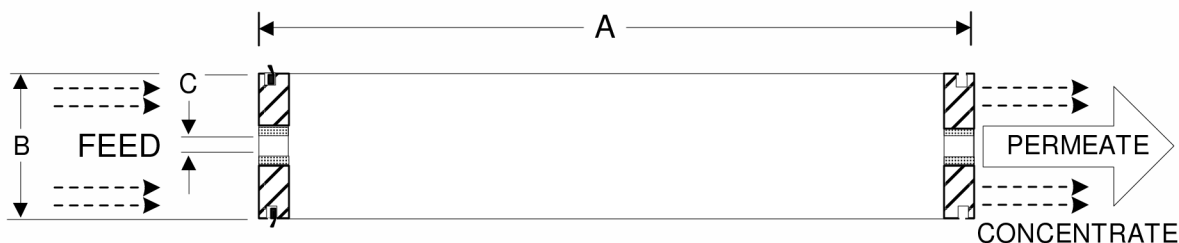

A, inches (mm)	B, inches (mm)	C, inches (mm)	Weight, lbs. (kg)
40.0 (1016)	7.89 (200)	1.125 (28.6)	36 (16.4)

Notice: Permeate flow for individual elements may vary + 25 or - 15 percent. All membrane elements are supplied with a brine seal, interconnector, and o-rings. Elements are enclosed in a sealed polyethylene bag containing less than 1.0% sodium meta-bisulfite solution and 10% propylene glycol, and then packaged in a cardboard box.

Hydranautics believes the information and data contained herein to be accurate and useful. The information and data are offered in good faith, but without guarantee, as conditions and methods of use of our products are beyond our control. Hydranautics assumes no liability for results obtained or damages incurred through the application of the presented information and data. It is the user's responsibility to determine the appropriateness of Hydranautics' products for the user's specific end uses. 7/29/09

For information contact:



info@ilser.com

www.ilsersuaritma.com

Tel : +90 232 441 1 441

Fax : +90 232 441 09 19